

# **Troubleshooting Tips**

### Single Color Scan-to-Print

Very rarely, you may experience a scan-to-print output that turns your original multi-color image into a single color (see image). There are two different options to resolve this.

Example of possible issue:



## **Option 1**

1. On the front panel, touch the **Copy tab**, then choose **Image** for your document rather than Lines or Mixed. Proceed as normal.



## Option 2

1. After selecting your document type, touch the 🏠 in the lower left corner and turn off **Backgound Color Removal.** 

Copy Settings	
Content Type	Image >
Lighter/Darker	Normal >
Background Noise Removal	ON
Background Color Removal	III OFF

2. Scroll to and touch **Save Current Settings**. At the prompt, touch **Save**, then **OK**. Proceed as normal.

#### Paper Size Mismatch Error

If you encounter a Paper Size Mismatch on the touch panel, it may be due to the core of your paper roll.

#### Example of possible issue:

Paper Size Mismatc	h		
The paper loaded in the required for the print jo		not match i	the paper
Current paper: 606mm			
Required paper: 609mi	m		
×	Cha	nge Paper	Print Anywa

- 1. Touch **Print Anyway** and if the file prints correctly, proceed to Step 2.
- 2. On the Home Screen, touch the **\*** in the upper left corner and scroll to and touch **Print Settings**.
- 3. Touch Media Mismatch prompt, then touch Print Anyway.

## **Technical Support**

For technical assistance, please contact your authorized VariQuest® dealer or the VariQuest Technical Support team:

- Email: techsupport@variquest.com
- Phone: 1-800-328-0585

Additional information can be found at resources.variquest.com.