



Roll Cover


1 Power off and unplug the power cord from your printer.

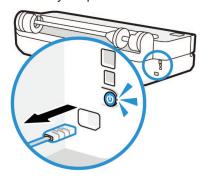


2

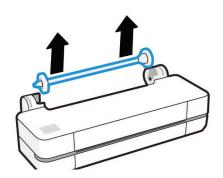


3

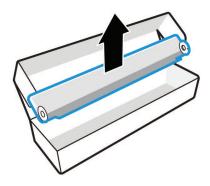


Ā

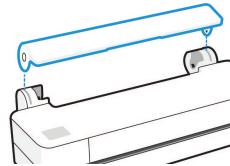

5

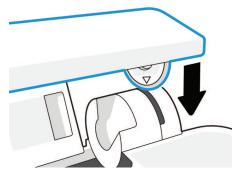

6

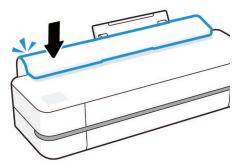

7 Plug the power cord back into the printer and power on.

