

VariQuest®

VariQuest® Design Center 2300 Unpacking and Setup Instructions

Step 1: Unpack the box and check the contents

The VariQuest Design Center 2300 (DC2300) and its accessories are packed in a cardboard carton with foam padding for protection during shipment. Carefully unpack the system and keep the packing materials for future use.

Verify the items in the box. If an item is missing or appears to be damaged, contact your authorized VariQuest Dealer immediately.

Included in the box:

- All-in-One Touch PC
- Power Cord
- Keyboard & Mouse *



*The DC2300 is equipped with a touch-enabled screen. The use of mouse and keyboard is optional.

Step 2: Attach the stand arm to the base

1. Attach the stand arm (3) to the base (1) with the two hand screws located in the bottom of the base (2). See figure 1

Step 3: Attach the stand

1. Place the Design Center facedown on a soft, flat surface. We recommend that you set down a soft cloth to protect the screen's surface.
2. Align the stand with the connector on the back of the computer.
3. Press down on the stand until it clicks into place.

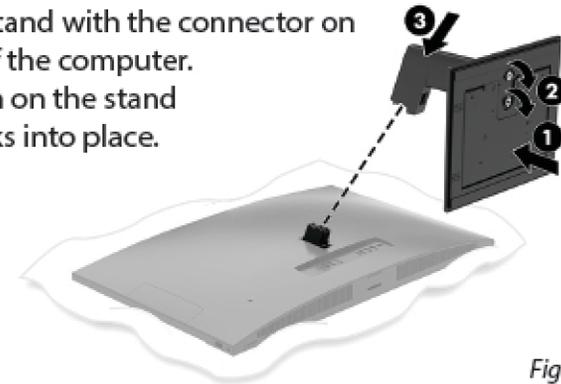


Figure 1

Step 4: Connect the power cord

1. Connect one end of the power cord to the AC adapter (1).
2. Connect the other end of the power cord to an outlet (2).
3. Connect the round end of the power cord to the power supply connector on the back of the DC2300 (3). See figure 2

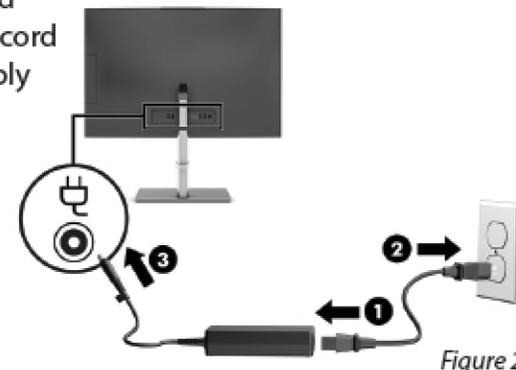


Figure 2

Continued on reverse

Step 5: Connect your VariQuest® Devices

Connect peripheral devices, such as the VariQuest Tools, to any of the USB ports on the DC2300. See figure 3 below for port locations.

When connecting a VariQuest Perfecta® Series Printer, please refer to the setup and installation instructions provided with the printer.

Drivers and utilities for VariQuest devices are preinstalled on the DC2300. If you plan to connect non-VariQuest devices to your Design Center, please refer to the user's guide of those devices for installation instructions.

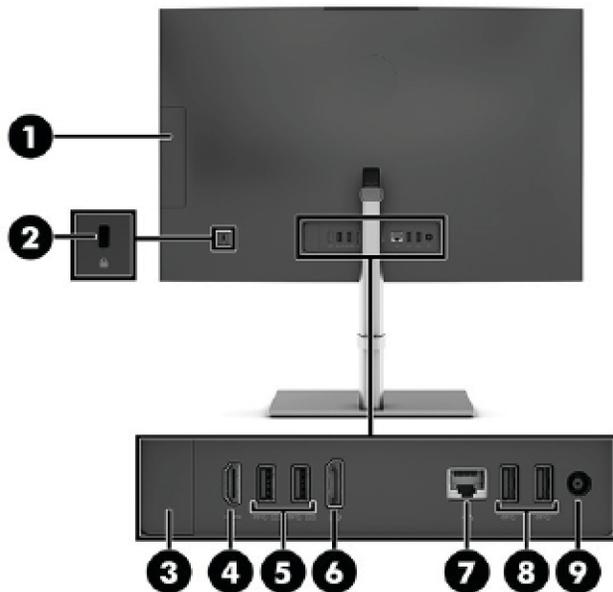


Figure 3

1.	Slim optical drive (select products only)	5.	USB SuperSpeed ports (2) (includes keyboard connection)
2.	Security cable slot	6.	DisplayPort™ monitor connector
3.	Optional port	7.	RJ-45 (network) jack
4.	HDMI in-port	8.	USB SuperSpeed ports (2)
		9.	Power connector

Step 6: Power on the Design Center 2300

Press the Power Button located on the bottom right side of the display (1). See figure 4

When you turn on power to the DC2300, the VariQuest Design Center Software is launched automatically. Refer to the VariQuest Design Center Software User's Guide for details about using the software with each of the VariQuest devices.

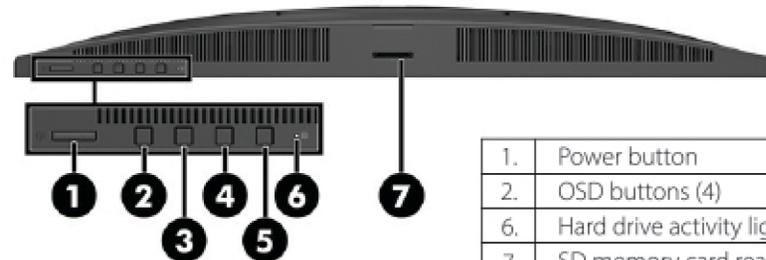


Figure 4

1.	Power button
2.	OSD buttons (4)
6.	Hard drive activity light
7.	SD memory card reader

Technical Support

For technical assistance, please contact your authorized VariQuest Dealer or the VariQuest Technical Support team:

- **Email:** techsupport@variquest.com
- **Phone:** 1-800-328-0585